


Before you start please ensure the fan is switched off



STEP 1

Remove duct tape from base unit and remove front.

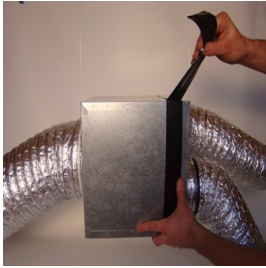

STEP 2

Remove the dirty filter.



STEP 3

Install the new HVF filter into the base unit, ensuring the black seal is facing outward, leave filter protruding 25mm.



STEP 4

Push cowling back on to make contact with seal and push home.
Re-tape base unit together with duct tape.



STEP 5

Your unit is now ready for use.

Should you have any doubts or require any further help please contact the number below:

Filtercorp International Limited
0800 481 9999

www.filtercorp.biz

INSTALLATION INSTRUCTIONS

